your wellness company

EN

Instructions Manual

Tal

WKS028+.3.AXX.HT

Electric Spa Bed

VERSION 1.25

weelko your wellness company

1.Welcome!

Congratulations on purchasing this new spa bed. This manual is only for reference of using and operating this electric spa bed. Our company does not assume all the consequences and responsibilities caused by using this manual for other purposes.



WK

Imported by
WEELKO BARCELONA SL
Pol. Ind. La Valldan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com

2.Warning

protective grounding sign

当Functional ground identification

This electric beauty bed is classified as Class II BF type equipment according to the protection against electric shock hazards.

☑ power supply must be cut off when changing electrical components or maintaining and cleaning machines.

☑ The plug must be plugged into an outlet that is properly installed and grounded, to prevent the risk of fire and electric shock.

☑ Do not stand on this equipment.

☑ Do not allow children to play with and place the equipment in a place where children can avoid touching; please adjust the backrest back to the highest position when you leave.

☑ please do not place the equipment in damp places such as bathroom to avoid electric shock or other failure; The remote control should also avoid contact with water.

☑ please do not place the equipment in places where painting/coating or oxygen providing during operation.

☑ unless being monitored by guardians or instructed and responsible for their personal safety, the people who have physical obstacles, tactile disorders, mental disorders, lacking of experience, common sense or children, are not allow to use the equipment.

☑ please contact distributor, or related manufacturer with appropriate skill and experience for repairing if the plug is damaged , in case of any dangerous.

v please make sure there is no accessible thing within the stroke during any operation of the beds.

☑Maintenance should be processed by trained professionals.

3.Precautions

Read this manual carefully before installation , operation and adjustment, and please keep it well .

This electric beauty bed is equipped with a three-wire power cord. The power cord must be plugged into an three-hole outlet which is properly installed and grounded. This is not only to prevent the risk of electric shock, but also ensure bed work properly.

when adjusting the backrest, seat cushion , footrest or lifting of the whole bed by manual controller or foot control switch , please keep your hands , feet and head away from the position①②③④⑤⑥showed on below photo to avoid getting jammed.

while controlling the lifting of the whole bedy the button must be pressed continuously until the bed be in a suitable position.

please pay attention that the input frequency should be Max 6min/h when operating the motor.

Maintenance should be processed by trained professionals.

please use neutral reagent to clear the dust, stains on leather or on plastic cover after each treatment.



4.Structure of electric spa bed

This beauty bed consists of three motor controller box, motor, hardware, plastic parts and Pu leather. Among them, the controller box is controlling the operation of three motors and hand controller.

This beauty bed includes angle adjustment of the backrest, lifting adjustment of whole bed , angle adjustment of footrest and which is an overall and integral structure.
(Details as shown below)



①Angle adjustment of the backrest

② Lifting adjustment of the whole bed

③ Angle adjustment of the footrest

This electric beauty bed is suitable for beauty and massage treatment.

5.Installation


① put the bed to a proper location, according to the overall layout, the daylighting or artificial lightings and operation condition of the salon's or home. And keep it in the clean, dry and cool operating environment.

② open the packing carton to check if the bed is intact and see if the accessories or spares are complete. kindly contact distributor or manufacturer if any problem.

③ place the bed to the proper position. please note that it is unnecessary


to install extra screw on the floor to fasten the bed, because the original design has take the stability performance into consideration. But please ensure the bed is placed on a firm and flat ground, so as to prevent any accident. If the bed rotates or slant due to rough ground, you could adjust the four pieces of plastic feet (M1ox30) and nuts (M10) by hexagon open-end wrench, which are fasten on the bottom panel, so as to ensure the bed is stable.

④power Input: voltage and frequency input shall be AC 100-120v/60Hz, 220-240v/ 50Hz. plug the bed on the power supply properly.
(Details as shown below)

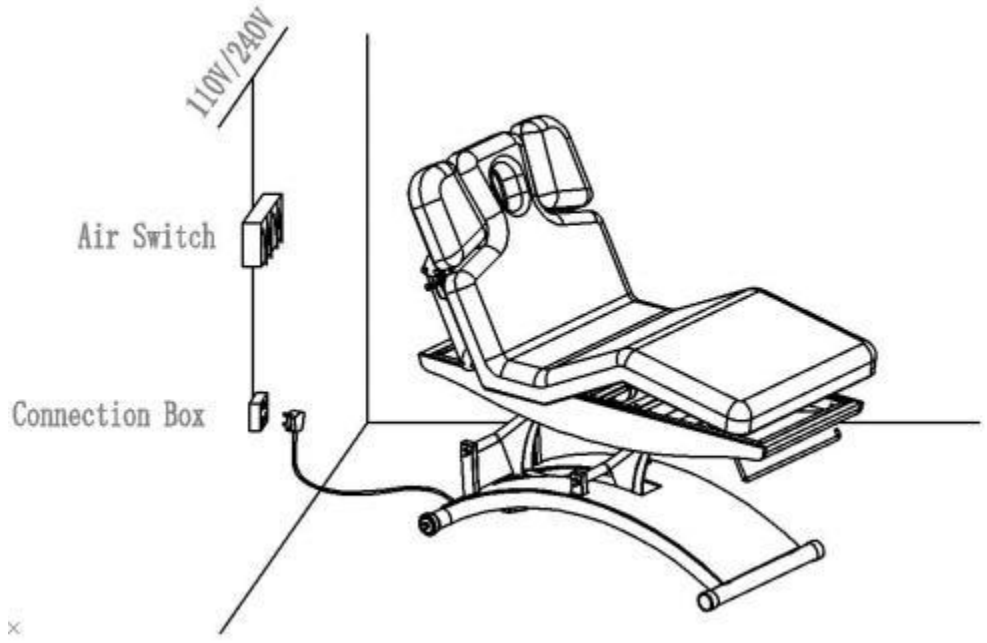


6.Operation instruction

standard configuration
(Instruction of Hand control with mechanical lock)

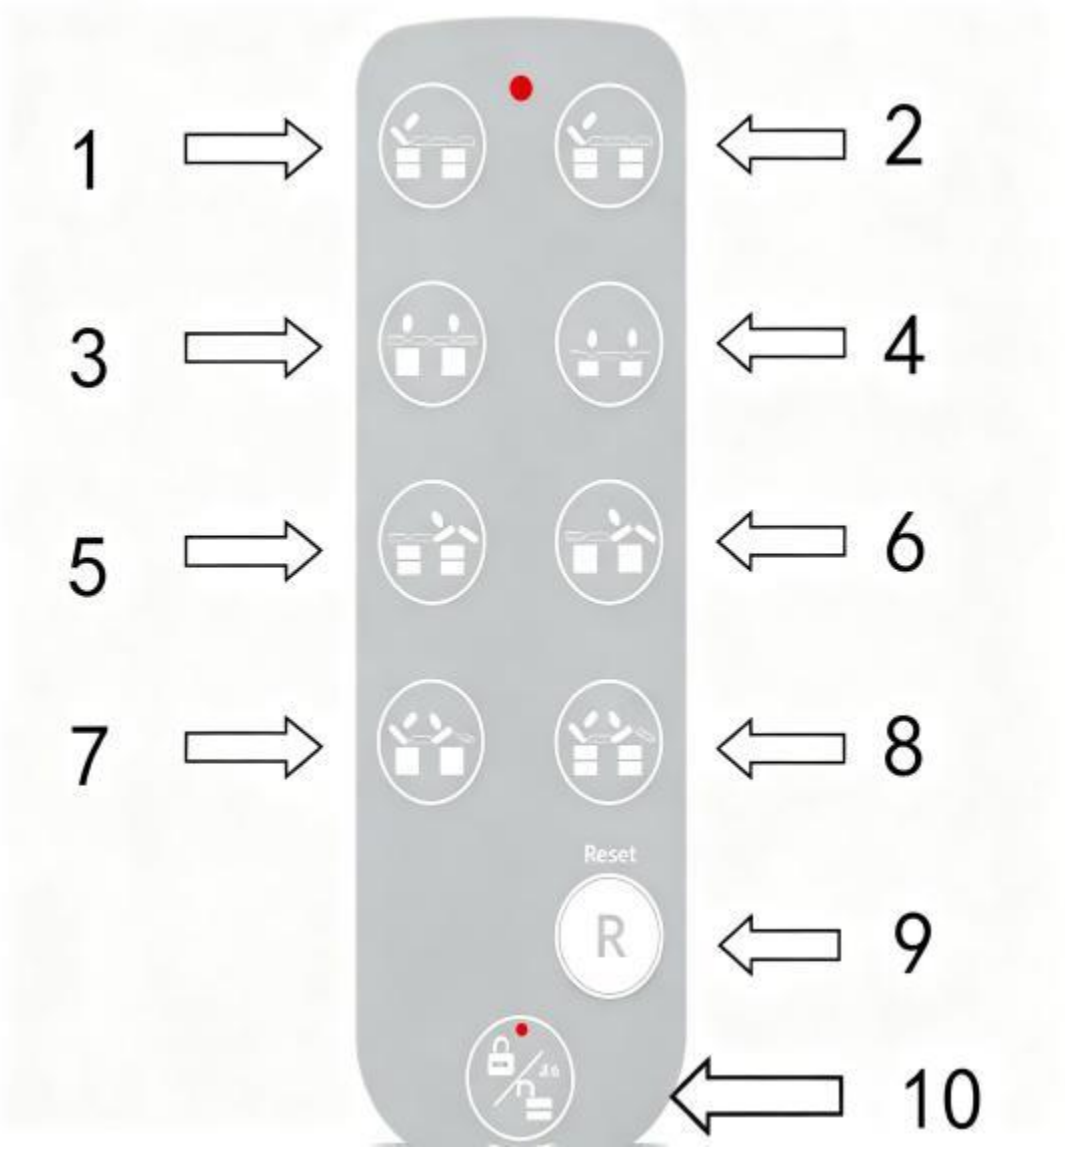

	Description	operation
1	Backrest motor goes up	Backrest goes up smoothly by pressing the button.
2	Backrest motor g0es down	Backrest goes down smoothly by pressing the button.
3	whole bed motor 90es Up	The whole bed goes up smoothly by pressing the button.
4	whole bed motor g0es down	The whole bed goes down smoothly by pressing the button.
5	Footrest motor goes up	Footrest goes up smoothly by pressing the button.
6	Footrest motor goes down	Footrest goes down smoothly by pressing the button.
7	Backrest and Footrest function simultaneous 90es Up	Backrest and Footrest will goes up smoothly at an even rate by pressing the button.
8	Backrest and Footrest function simultaneous goes down	Backrest and Footrest will goes down smoothly at an even rate by pressing the button.
9	CPR	The entire bed resets to its initial position after pressing CPR button
10	Mechanical lock	Hand control will function /not function when unlock/lock the button.

- Heating Function

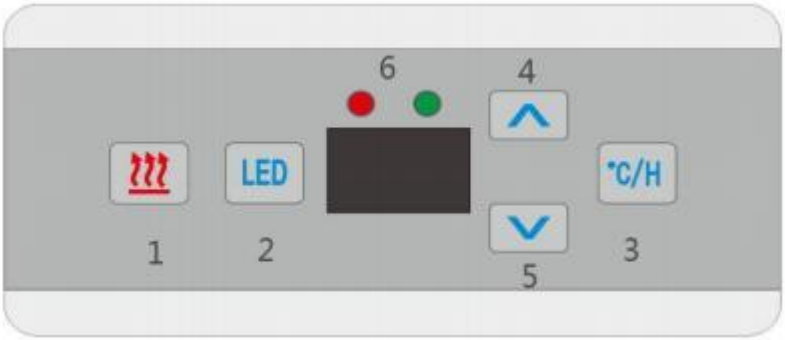

1.Heating ON/OFF	2.LED color adjustment / ON/OFF	3.Temperature/Time Setting
4.Temperature/Time Increase	5.Temperature/Time decrease	6.Red power indicator light /Green heating & constant temperature status indicator light

Operation Instructions:

1. Heating Switch：This is the heating ON/OFF switch;

When this key is pressed, both the red and green indicator lights on the panel will turn on, and heating will begin; When the temperature reaches the set value, the green indicator light⑥ turns off, heating stops, and the system enters constant temperature mode; Press Key ① again to turn off heating.

2.②LED Control

Short-press 1–8 times to cycle through 8 different colors (one color per press); Press 9 times for automatic color cycling. Press 10 times to turn off the LED; To turn off the LED while in colors 1–9, long-press LED Control.

3.③④⑤Temperature Setting

After turning on heating, the panel displays the real-time temperature; At this point, you can use ③④ and ⑤ to set your desired comfort temperature; Press Key ③ once after heating is on: the temperature display starts flashing; While flashing, tap Key ④ to increase temperature, or Key ⑤ to decrease. After selecting the temperature, if no operation is performed for 3 seconds, the system automatically saves and applies the current set temperature.

--Temperature setting range: 38–60°C.

--Factory default: 48°C

4. ③④⑤Time Setting (Using Key ③ and Keys ④/⑤):


After turning on heating (panel shows real-time/temperature), press Key ③twice to enter time setting mode—the panel will display "H1". Then use Key ④ to increase time and Key ⑤to decrease time.


--Time setting range: 1–6 hours.


-- Factory Default: 1 hour

7.Technical Parameters

Product size	1980(L) ×770(W) ×600(H) mm（±2%）
Package size	2020×810×630mm
The highest Position	900±30mm
The Lowest Position	600±10mm
Net weight	94 kg
Gross weight	107kg
Power	AC 100～120V ,50Hz/60Hz Or AC 220～240V, 50Hz/60Hz Optional
Backrest adjustment	0°～+67°
Footrest adjustment	-25°～0°
Handrest adjustment height	165mm
Lifting rated load	200 kg

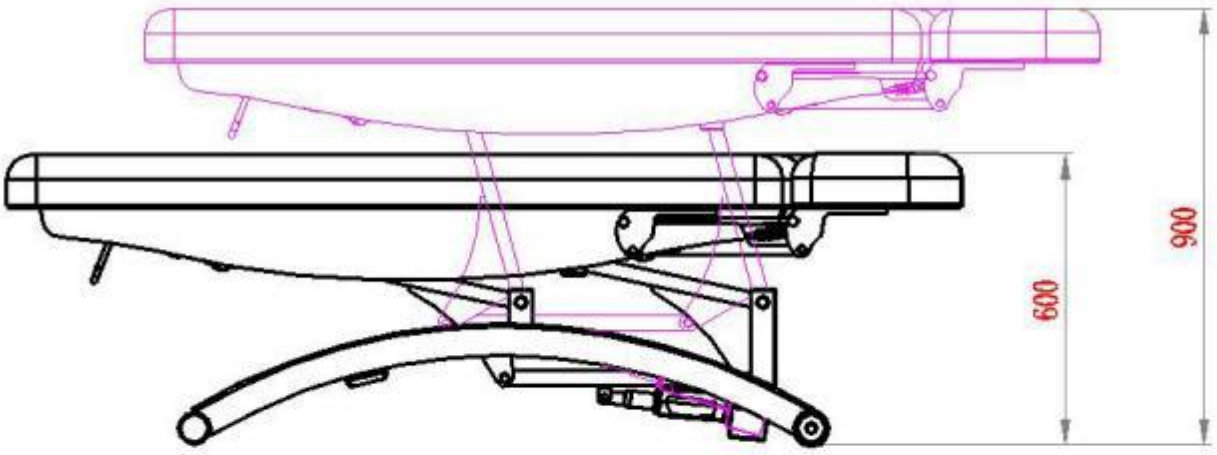
900
600

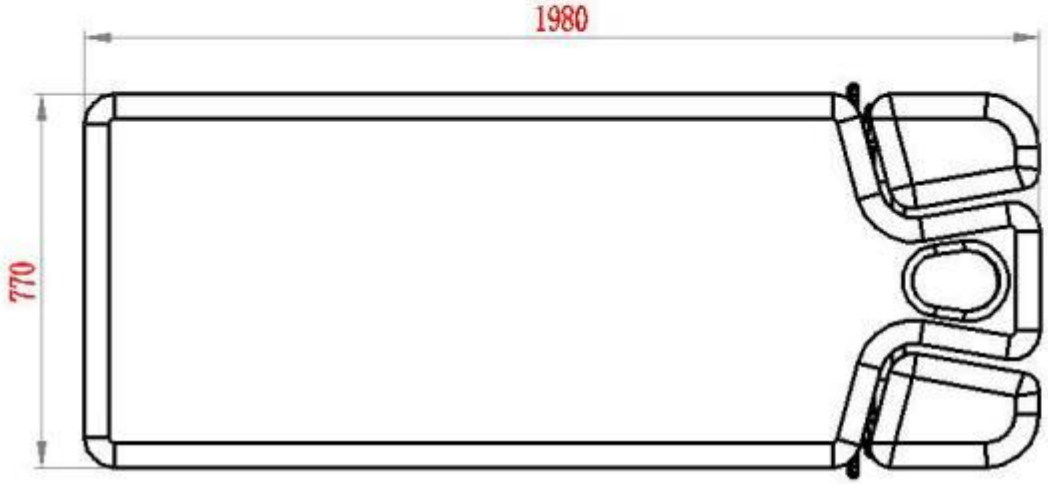
1980
770

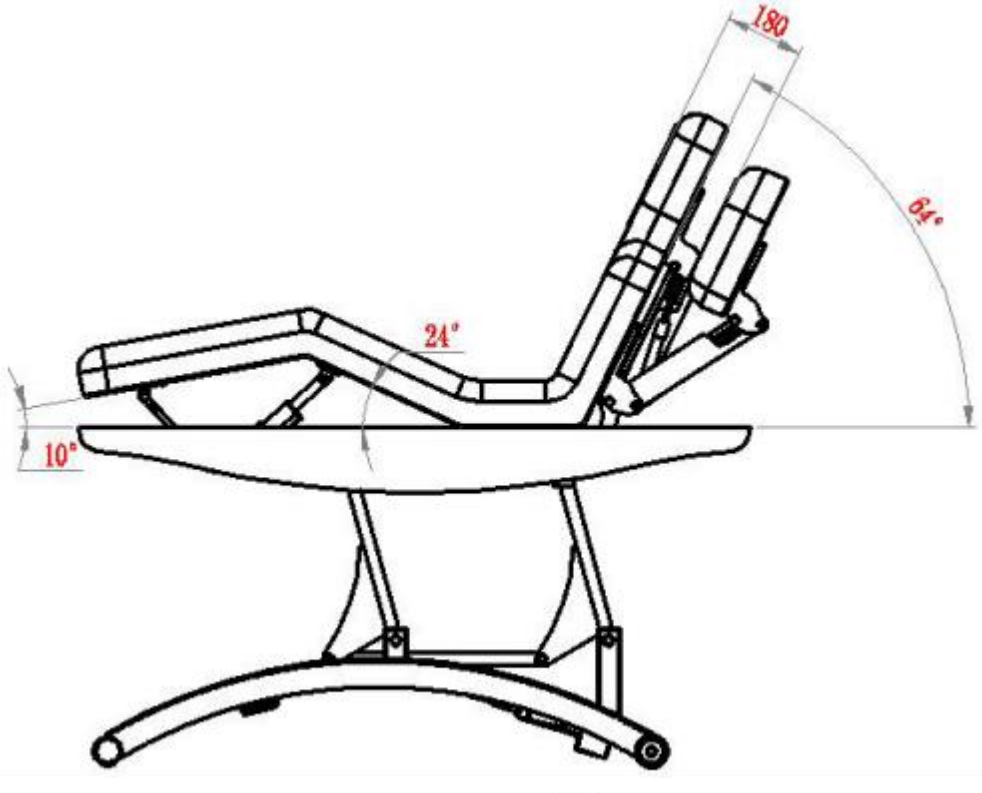

180
64°
24°
10°

8.Maintenance

After every treatment, please use neutral reagent to clear the dust, stains on leather or the plastic cover. This is to prevent premature aging of the leather and plastic cover.

9.Circuit system connection

AC 1 00-120V , 50Hz/60Hz OR AC 220-240V ,50Hz/60Hz

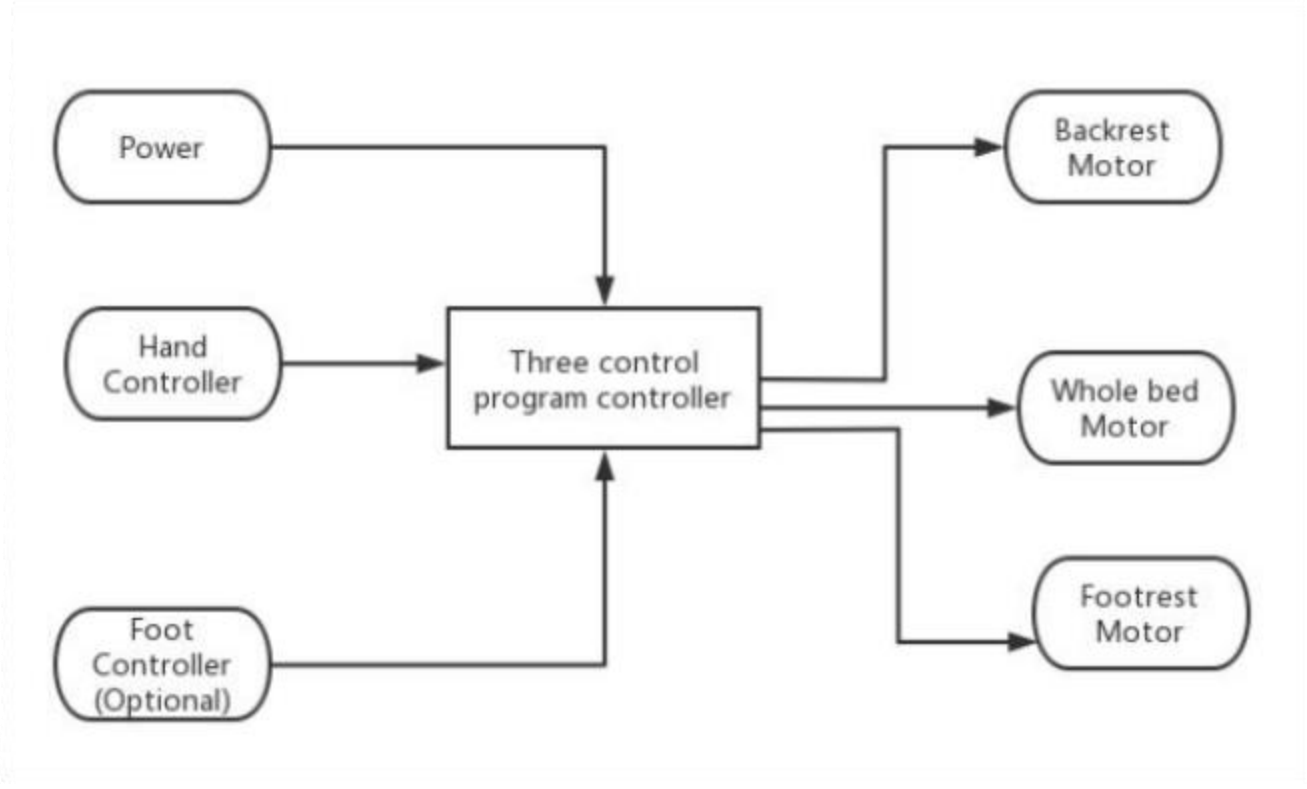

10. Troubleshooting

	Reason	solution
can't go up or down normally	The power cord is unconnected or not well plugged	connect the power cord or plug it well
	poor quality of manual controller	Replace the manual control panel
	poor quality of foot controller switch	If problem is still not solved after replacing manual or foot control switch, kindly contact maintenance center or supplier to clear the trouble.
	poor quality of controller box	
	Rupture of motor tail	
	Motor detonation	
Abnormal sound	The rotating parts lack of lubricating oil	Add lubricating oil
	Rotating position (such as hinge, P, O, M Sets) Lack of lubricating oil	Add lubricating oil
	Motor quality problems	Replace the motor

11. Icon explanation

	warning note, refer to accompanying documents		Manufacturer
	protective grounding		Maximum safe load
	Type B application part of the equipment		upward
	protection from rain		separate disposal sign for waste electrical and electronic equipment (please comply with local laws and regulations)
	Battery		place carefully and gently

kindly check and verify products specifications before use and this manual is only used for reference. The product specifications will be subject to change or update without further notice.

WK®

Imported by
WEELKO BARCELONA SL
Pol. Ind. La Valldan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com