


Instructions Manual

Beautyinstrument

WKV1109C

Facial Steamer

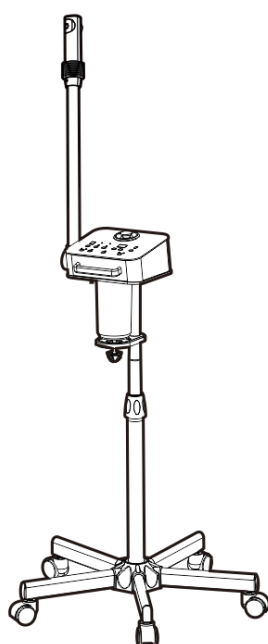

VERSION 1.26

CORRECT USE OF THE DEVICE

- This product has been designed to be used by beauty professionals at beauty salons and should not be used for other purposes.
- Please note that any misuse of the device entails the loss of the guarantee.
- Do not make any modification to the device without the authorisation
- we shall not be held liable for any material or personal damage due to the misuse of the product.

CONTRAINDICATIONS

- This product should not be used on:
 - People with metal implants in their body.
 - People with pacemakers or heart problems.
 - Pregnant women.
 - People with sensitive skin, lesions, inflammations, or any skin problem or disease.
- With people undergoing medical treatment or a diagnostic process, the product must be used with medical authorisation.

PRECAUTIONS

- Before using it for the first time and after each use, check the device and the mains cable for any damage.
- Unplug the device from the mains before starting to clean it or undertaking any type of maintenance.
- Do not use the product outdoors or in places where it may be affected by humidity or inclement weather.
- If the power supply cable is defective, unplug the appliance immediately and inform your dealer or specialised technician.
- Position the power supply cable properly so that people cannot trip over it and make sure you plug it into an earthed socket.
- At the end of the working day, disconnect the device and unplug the power supply cable from the mains.
- If you detect any anomaly in the operation of the product, please contact your distributor or specialised technician.

SAFETY INDICATIONS

- The device and accessories should be kept out of the reach of children.
- Only plug the device into a properly installed socket. The local mains voltage must correspond to the technical specifications of the device.
- The power socket must be accessible in case you have to quickly unplug the device at any given time.
- Always pull out the actual plug and not the mains cable.
- Never tamper with any electrical component or open up/repair any component of the device, Only your distributor or specialised technician should repair the device.
- Do not switch on the device if there is visible damage to it or to the mains cable.
- Never touch the device or the mains cable with wet hands.


WARNING

- It's forbid to put oily material into water cup or herbal net; it may cause the problem of water spray.

- It's not allowed spray from the above of the face by the steam hole, otherwise may causing scald.
- It's not allowed to take the herbal cover and water cup apart under machine is spray.
- It's not allowed to put this machine in the over humidity environment to work, for example: bath room etc.
- It's not allowed working under projective sunshine, otherwise will cause many kind of unsteady conditions.
- If there's any exceptional problem, please contact the agency to let professional maintainer to repair instead of opening the host machine cover to repair by you.
- If power cord is destroyed, it's better to choose the accessories from the original factory. It's not allowed to repair by un-professional personnel; you should go to appointed repair agency to change.




Attention

- Before turning on the host power to work, check whether the water cup is tightened, whether the water level in the cup is between the upper and lower water level scales of the water scale, and whether the herb cover has been effectively covered on the water injection port.
- When the host needs to add the aromatherapy oil in the working state, please pause the spray first and then add it.
- When carrying out beauty spraying, you must wait until there is a stable and even fine mist sprayed out of the spray port before carrying out beauty operation.
- In order to avoid hot spray steam burns, the spray mouth must be more than 40cm away from the customer's face, and the steam should be blown evenly to the whole face from the customer's chin.

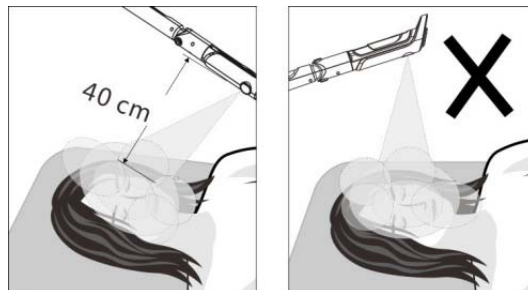


- Ozone tube has sterilization effect, long time use will cause damage to the skin and destroy the nutrition of the drug, when using should choose the appropriate time according to the different skin.
- Do not disassemble the water cup of the machine just after using the spray, otherwise it may cause burns, you must wait for the machine to cool before disassembly.
- Always pay attention to the water level of the water cup during work.
- When adding water, you should try to avoid overflowing the water out of the surface of the shell, otherwise not only affect the work of the host, and may even cause leakage.
- If you find that the bottom of the mainframe is leaking water and air, you must turn off the mainframe power before checking whether the water cup has been installed in place. If the situation is still not improved, please contact the seller to solve the problem.
- The power socket connected to the main unit should have good grounding.

Packing list:

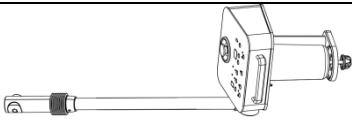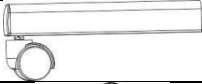
Item	Product Description	QTY
Host machine		1pc
Column		1pc
Five Feet Standing		5pcs
Five Feet Base		1pc
Five Feet Plat Broad		1pc
M10screws		1 set
M6 screws		5pcs
Wrench		1pc
User Instruction		1pc

Host machine

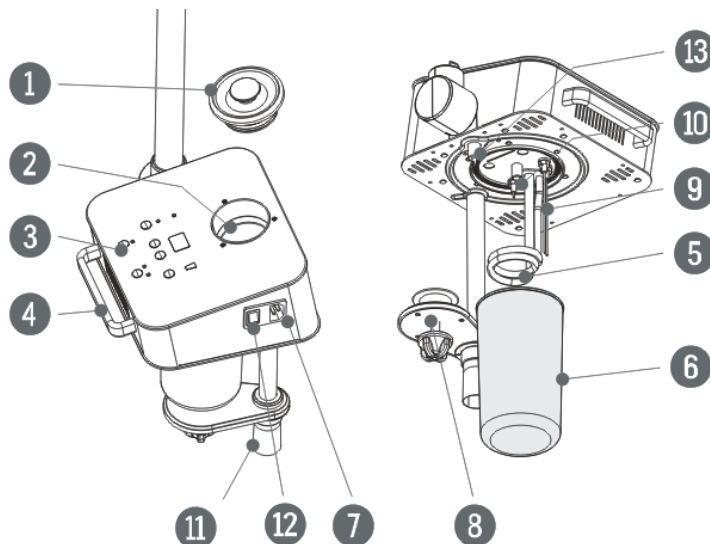


- | | | | |
|-------------------------|---------------------------|-----------------------|---------------|
| 1.Cover | 2. Water Inlet | 3.Control Panel | 4.Host Handle |
| 5.Heating Pipe | 6.Glass cup | 7.Power Cord | 8. cup holder |
| 9.Low Water Level Probe | 10.High Water Level Probe | 11.Host mounting base | |
| 12.Power Switch | 13.Spray arm limit lock | | |

Stand

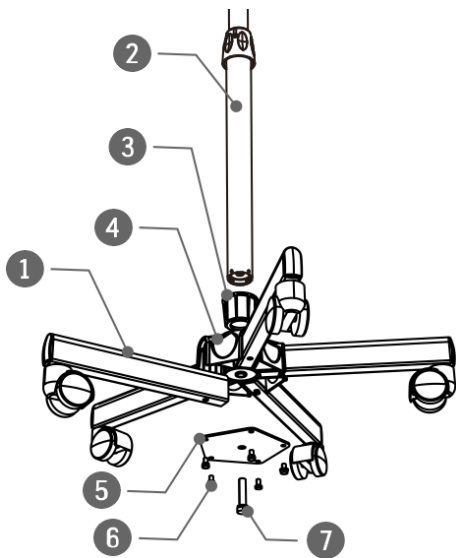


- 1.Five Feet standing
- 2.Column
- 3.fixing sleeve
- 4.Five Feet Base
- 5.Five feet plat board
- 6.M6 screw
- 7.M10 screw set

Spray arm groups

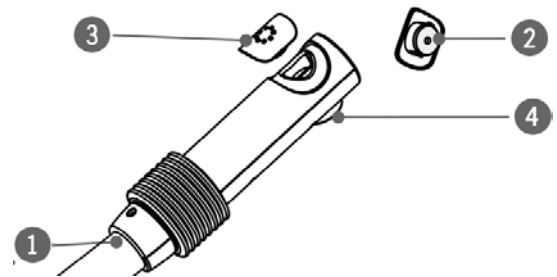


- 1 Spray Arm
- 2 Essence oil Cotton
- 3 Essence sliding Cover
- 4 Steam Outlet

Host installation instructions

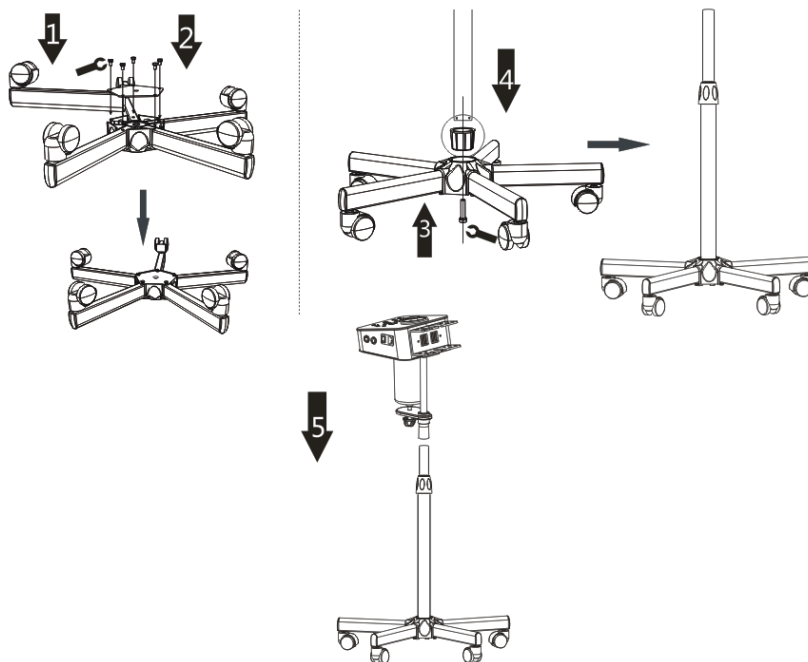


- 1.the five Feet standing pressed on the five feet base, Press to horizontal.
- 2.press five feet plat board on the five feet standing; use M6 screws to fix it.
- 3 .the M10 screw set on the flat washer and spring, from the middle of the five feet plat board hole through
- 4 .will set the column on the fixed sleeve and then inserted into the middle of the five feet base, with the bottom M10 bolts to the column and five feet plat board fixed tight.
- 5 .will be placed on the base of the host, assembly is complete.

Spray arm unlock:

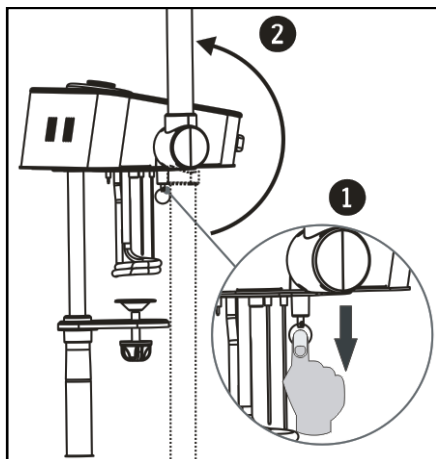

Host from the package, the spray arm is locked in a fixed position, you need to use your hand to hold the spray arm limit latch down (as shown by the arrow), the other hand to move the spray arm to do upward rotation action (as shown on the top) to the level of the position up to hear a snap, that is, the completion of the spray arm unlocked, and then release the spray arm limit latch. Finally plug in the power cord, turn on the power switch, the host into standby mode, the installation is complete.

Panel Description:

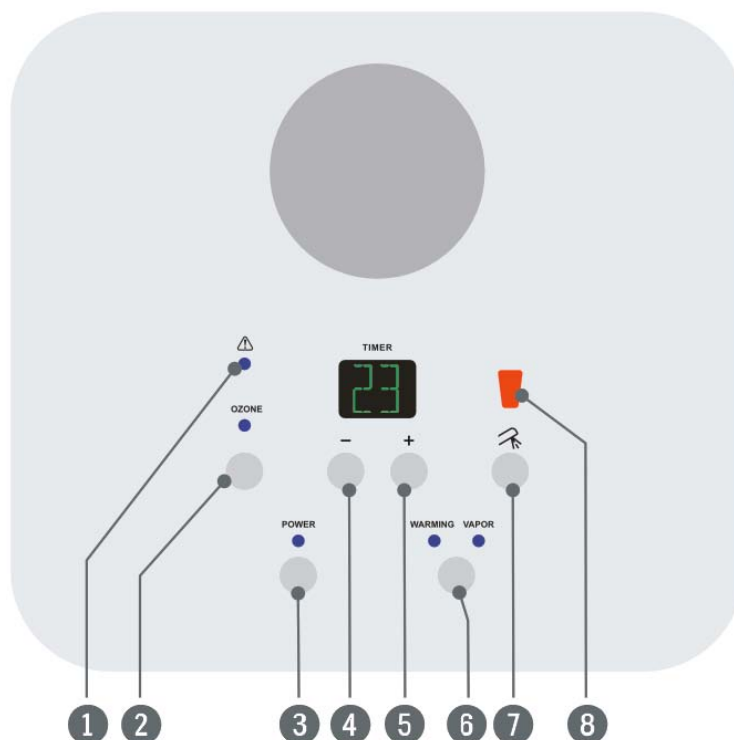

1.water level warning indicator

2. ozone Power Switch

3.power switch

4. time decrease key

5.time increase key

6.spray / keep warm selection key

7.Energy selection key

8.Energy indicator


How to use:

spray head setting

Spray arm with special design. It can adjust by different angle to fit different environment. As the follow picture:

50 degree can be adjust by left-right direction. 20 degree can be adjust by up-down direction. Spray head can be rotated 360 degree. spray arm adjust it around to 130 degrees. (Refer to Figures 1, 2, 3)

- Spray arm only can be used within defined limits. It will spray water or damage component if out of limit adjustment forcibly which won't be covered under warranty.
- Please don't adjust the arm too hard or it will damage inside joints of the spray arm.

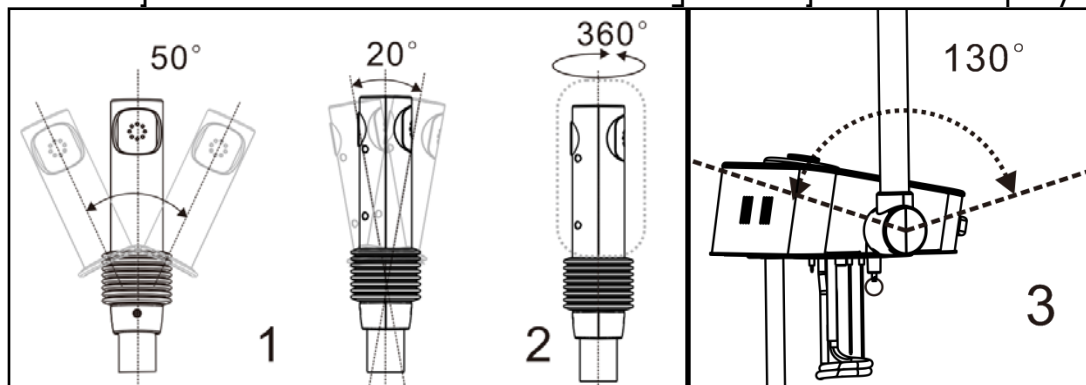

1、Put water into the cup:

Put distilled water into the cup after open the cover.

The water level should be between the highest and lowest of the water scale marks (As picture shown).

2、Adding essence oil:

If there's need essence oil spray therapy, open the essence oil sliding cover on the top of the nozzle, and use burette drop essence oil into the cotton pallet (one or two drops of essence oil are enough). (As right picture shown)



If it needs to change the essence oil, take away the essence oil base with tweezer and change the cotton.


Reset it and add new essence oil.

3、Water cup installation and removal:


Cut off the power before removing the water cup. Please water cup cold and then take it apart. One hand holds the water cup, the other hand holds the cup holder adjustment knob to do clockwise rotation as in the direction of the arrow, and then remove the water cup.

Installing the water cup also first cut off the power, one hand holding the water cup, the mouth of the water cup smoothly back to the chassis of the host; the other hand holding the cup holder adjustment knob, the cup holder rotated to the bottom of the water cup, tighten the adjustment knob can be. Note: need to ensure that the water cup holder pressed against the water cup, otherwise it will leak steam from the seam. (As shown in the picture below)

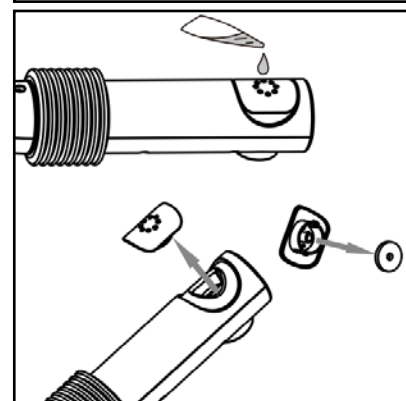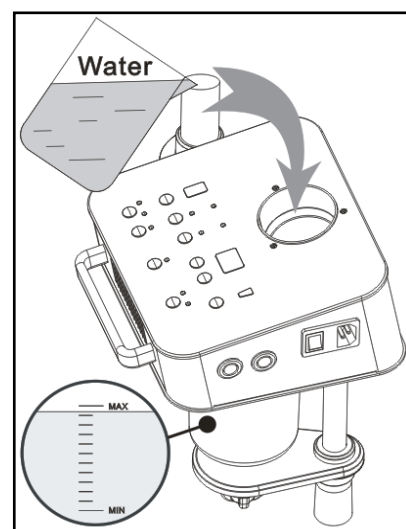

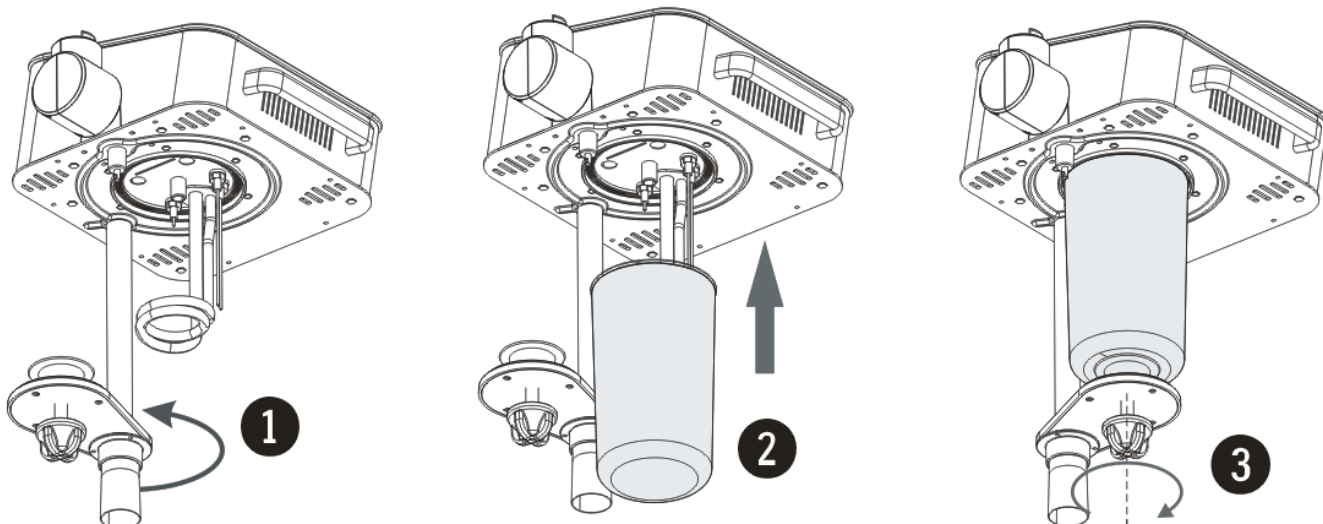

Control panel operation

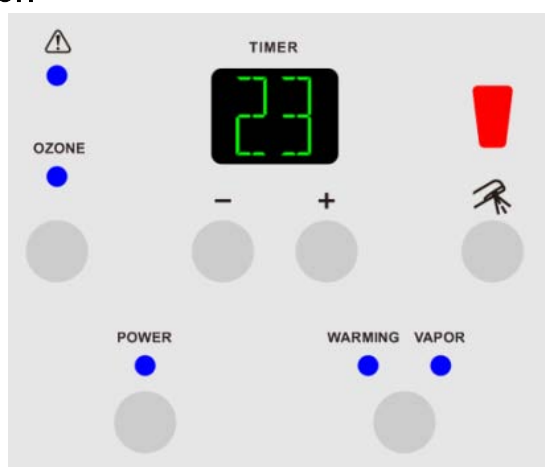

- Plug the power plug, Turn on the power switch.
- Press the "power" key to turn on the spraying function, the "○" power indicator above the "power" key lights up, the spraying function enters the standby state:
 - Time window shows "15" minutes;
 - on the energy display shows "☐" the maximum;
 - "OZONE" ozone switch key above the "○" ozone indicator does not light
 - "WARMING / VAPOR" hot spray start button above the hot spray indicator and warming light does not light:
- Press the " WARMING/VAPOR " key to select the hot spray or keep warm function.

Spray function: press the "WARMING/VAPOR " button, the above "VAPOR" hot spray indicator light; at this time, the host into the hot spray heating state; about six minutes , the spray port spray.

Warming function: press the "WARMING/VAPOR " key, the above "WARMING" indicator light; at this time, the host into the warming state; the water in the cup to maintain a certain temperature.

- Time setting

Select the appropriate working time through the "+" key and the "-" time decrement

key below the time window .

"VAPOR" hot spray indicator light on, time adjustment "1 to 30" minutes adjustable, the default "15" minutes.

When the "WARMING" indicator light is on, the time adjustment is adjustable from "1 to 90" minutes, and the default is "30" minutes.

- Energy setting

Press "" to select the output of the mist, there are high, middle and low mist for selection; the "" display window lights full means the highest energy, contrary means the lowest energy. Before the mist spouts should be selected the highest level in using, then adjust the mist according needed.

- Turn on the ozone function

Press the ozone switch "", the ozone working status indicator light "" is on; At this time, ozone pipe turns on, obviously ozone smells in the steam with distinct atomization phenomenon

- Water level detection function

The host machine detect the water level automatically when heating " spray" or "warming " ,when the water level under the normal working (water level between the maximum and minimum),the host machine will continuous heating ;

When too high or too low water level is detected , (when the water level was too high, the time display window will display "E2",when the water level too low, the time display window will display "E1", the host machine turn off the heating right away.

At this time, the indicator light "WARMING/VAPOR " key is off. the buzzer will give the alarm signal "De De" Continuously until the water level reach the normal water lever.,

and unlock the all the locked button, at this time, press the " WARMING/VAPOR  " to rework

Maintenance

- Replace the water with clean and fresh water before use every day, and wash the cup thoroughly after use to avoid the accumulation of grease and other residues.

- After using the aromatherapy spray every day, the aromatherapy cotton must be cleaned out of the aromatherapy holder.

- Clean the limescale on the heating element at least once a week. (When cleaning, put an appropriate amount of acetic acid or citric acid in the water cup, turn on the machine and heat it for 1 minute, then clean the heating tube with water.)

Specifications and Technical Data:

Product Name	Aromatherapy Ion Facial steamer
Function	Ion Facial Steamer
Rated Voltage/Power	ac. 100-130V / 750W
	ac. 220-240V/800W
Working Frequency	50/60Hz
Dimension(L×W×H)	86.5*34*29mm
N.W.	14.9Kg

Thank you for purchasing this product!

- Please read the entire instruction manual carefully before using the product. Take note of any warnings included in this manual.
- Always keep this instruction manual handy and if you give the device to another person, hand over the manual as it is an essential part of the product.
- Some components of the product may differ from the image that appears in catalogues, websites, brochures, etc.
- In order to enhance the product, the manufacturer reserves the right to modify its features and/or components without prior notice.



Imported by
WEELKO BARCELONA SL
Pol. Ind. La Valldan

Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com